

FTP-1516 FASTstart Guide



What is included?

- (1) Fiber tap w/ mounting bracket (for use with RMC-2 , RMC 12-2 or RMC-3, RMC 12-3)
- (1) Download Card/Faststart Guide (tells where to download more product information)

Fiber taps allow you to make a copy of network traffic as it travels between two network devices. These highly reliable, non-powered devices are the perfect solution to collect and capture network traffic for application analysis.


The FTP-1516 taps a 40GBASE-LR4 link and sends copies of the traffic out the 8 10G LR ports. The separation of traffic is based on wavelength.

Installation Follow the wiring diagrams shown below. Fiber taps are directional, and use specific inputs and outputs for TX and RX to work properly. Make sure to clean all connectors with compressed air and clean patch cable connectors prior to installation.

Typical Insertion loss ratios Network ports: 3.5 dB, Monitor ports: 5.0 dB

Legend	
	1271nm
	1291nm
	1311nm
	1331nm

The FTP-1516 fiber tap sits on a 40G LR4 link and outputs a copy of the data to 8 10G LR monitor ports. The FTP-1516 is completely passive and non-powered, meaning that it does not affect network performance or integrity. Invisible to the network. Each copy of traffic is split by wavelength and sent out 4 monitoring outputs.

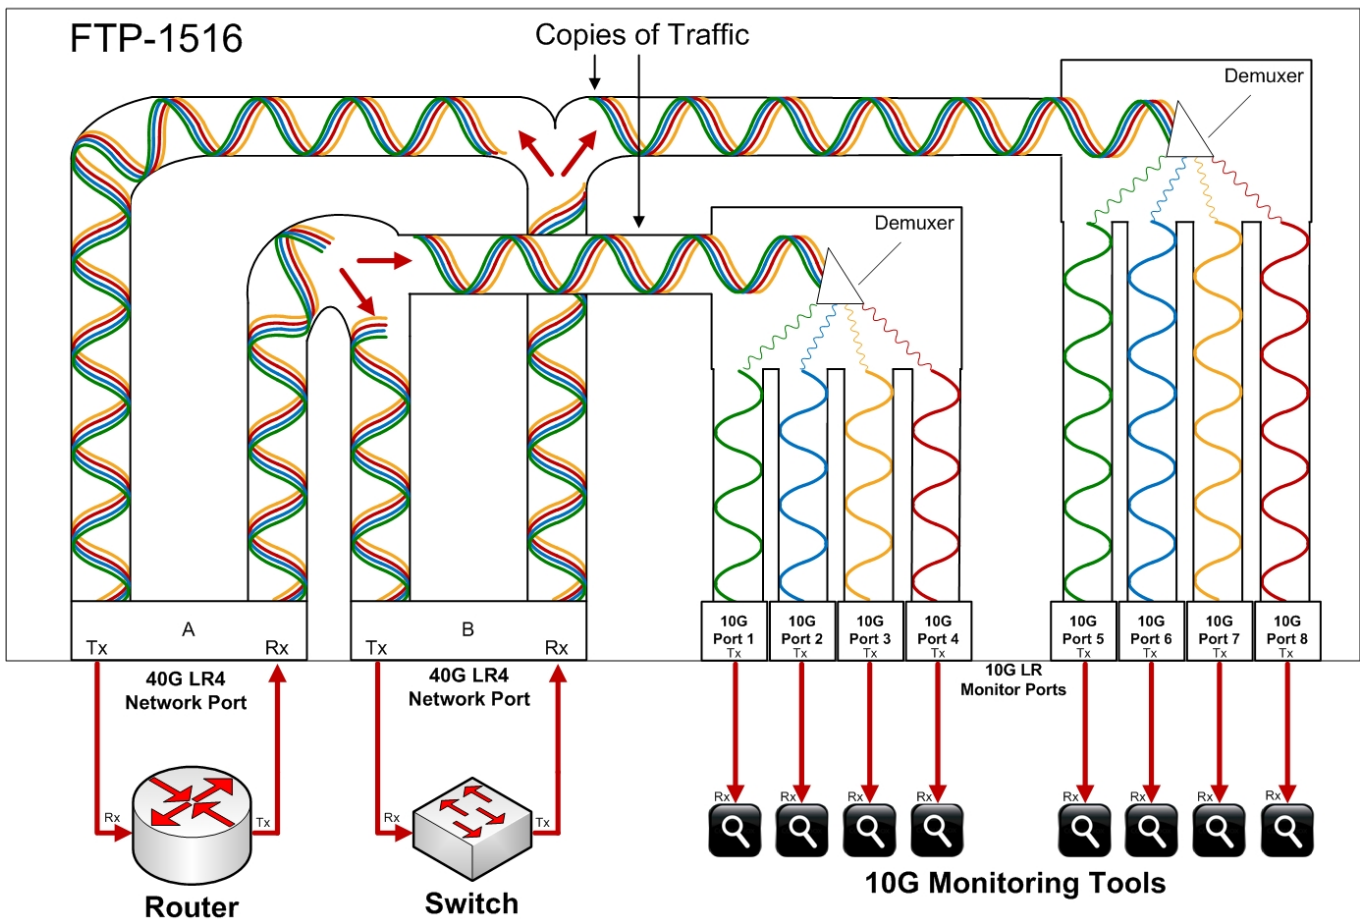

Find out more. Visit www.datacomsystems.com

For More information

Customer Service is available from our website: www.datacomsystems.com or by calling +1 315 463 9541